



**These Instructions Must be Read by the User Before  
Operating the Crane**



**Engine Cranes**

**The engine crane must be operated correctly according to the manufacturer's or owner's operating instructions, which are available on request if required**

**CHECK** that the wheels on the crane run freely before using the crane

The crane should be used on a smooth, level and hard surface to make it easy to move when loaded

**DO NOT** lift a load that is heavier than the safe working load (SWL) marked on the crane

Always use the lifting slings supplied by the Hire Company and use safe slinging practices

**CHECK** that the sling is correctly and securely positioned and that the jib hook of the crane is directly over the centre of gravity (point of balance)

**DO NOT** attempt to move a loaded crane over an uneven surface which will cause excessive shock loads

Keep the load as close to the ground as possible when moving the crane

**DO NOT** work on an engine unit when it is suspended from the crane

**DO NOT** place any part of the body under a load suspended from the crane

**DO NOT** leave a load suspended from the crane for more than about 15 minutes

**NEVER** leave it unattended

Always lower the load slowly and carefully. **DO NOT** attempt to remove the sling until the total weight of the load is released from the crane

**DO NOT** attempt repairs. Contact the Hire Company